




# Disassembling Nikon Coolpix 5600 Front of camera

Learn how to remove the front of Nikon Coolpix 5600 front of camera

Written By: Crista Riedy

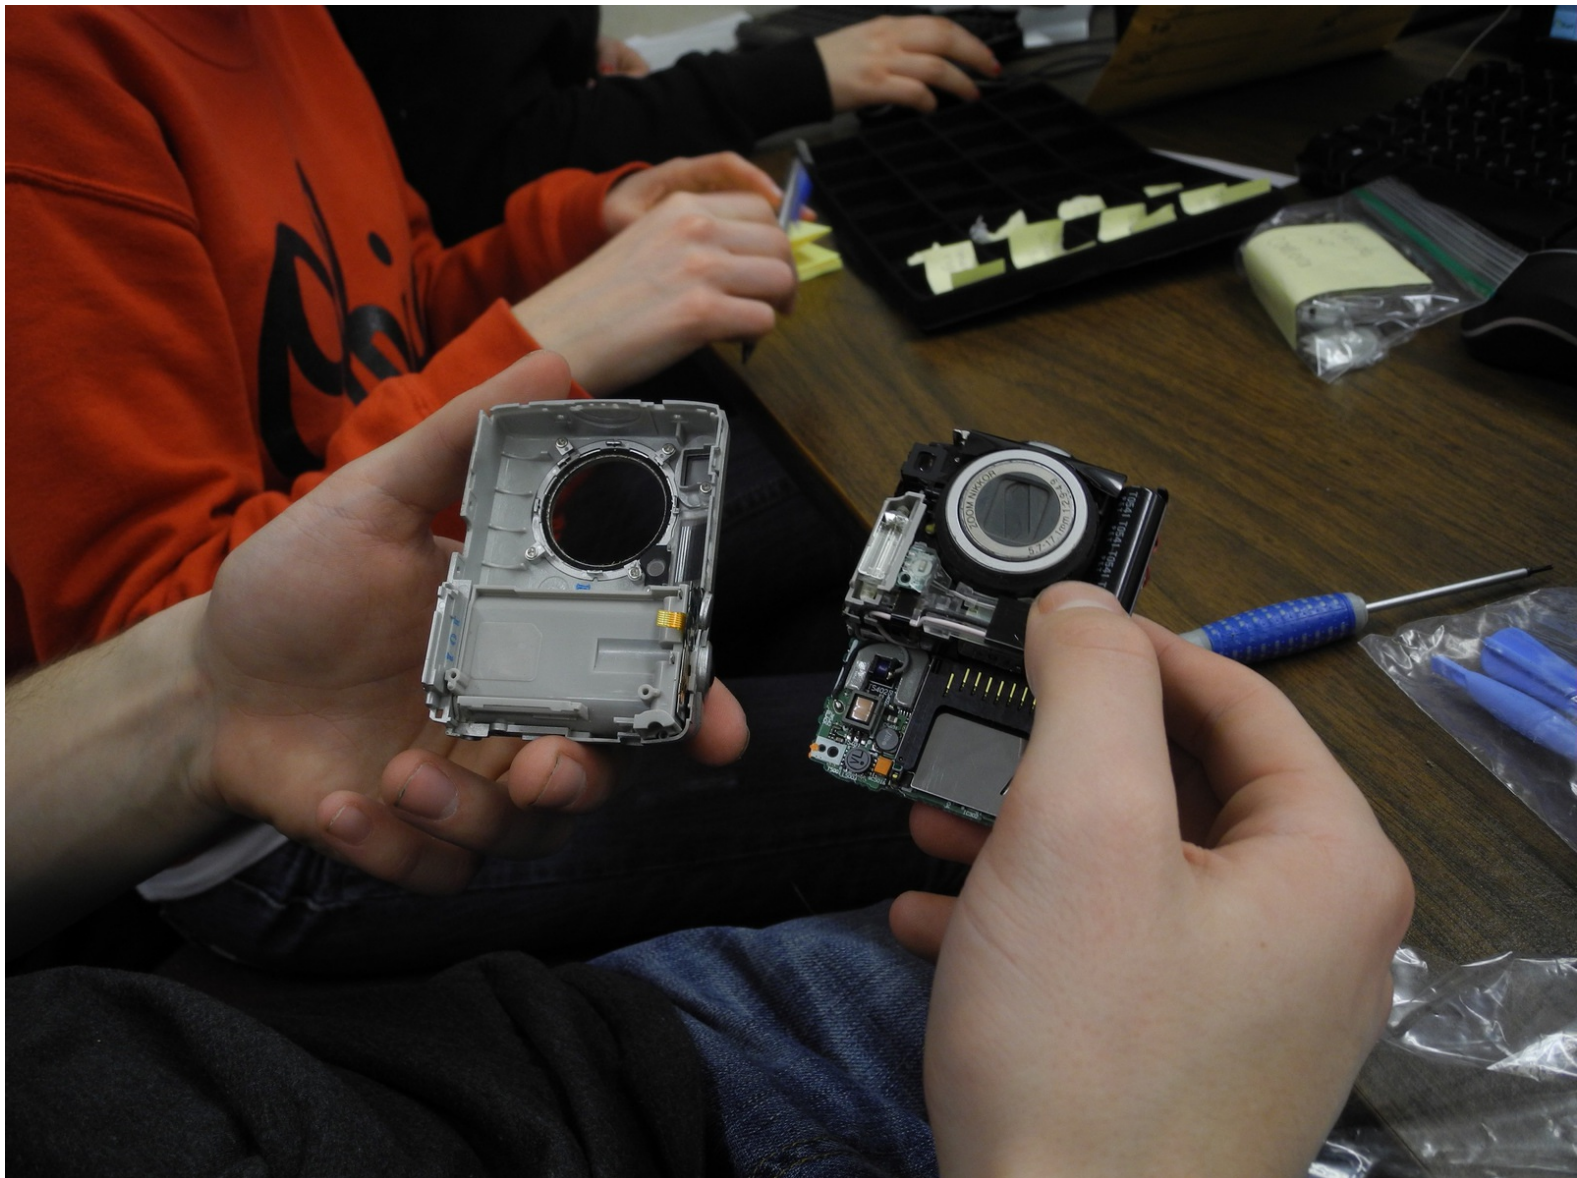




## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Remove front of camera

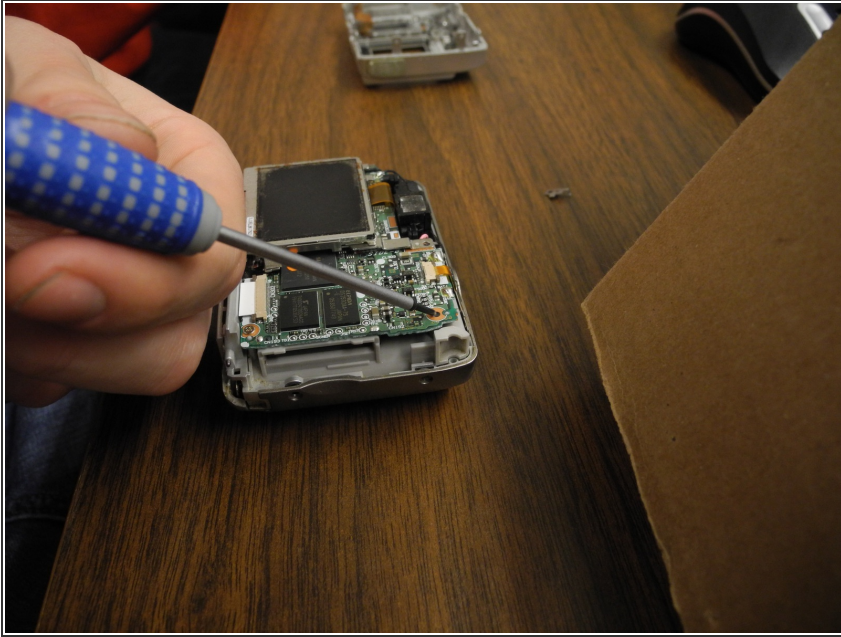

- Unscrew the top right corner screw

## Step 2

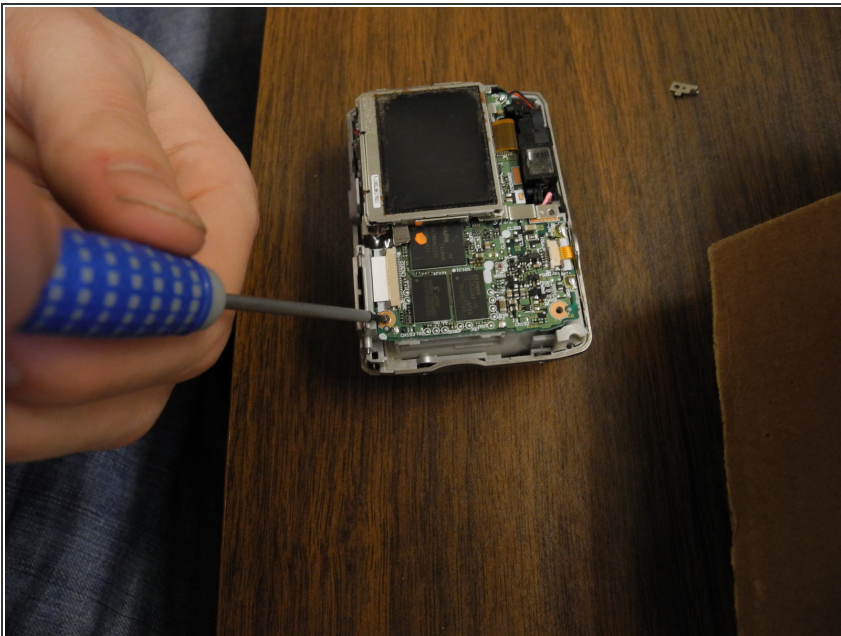

- Unscrew the bottom right corner screw.



## Step 3



- Pull the grey circular facet that sits on the bottom outside of the camera off - may have to use force.

## Step 4



- Pull the front of the camera off of the mother board.

To reassemble your device, follow these instructions in reverse order.

